


STOCK GARMENT PROGRAM

Our STOCK program provides a service that is unique to the industry.

The STOCK garment program utilizes industry recognized fabrics that allow for quick installations. Thus, eliminating long lead times that are common from cleanroom garment manufacturers. A wide variety of sizes and industry accepted styles will be STOCKED for industry specific requirements.

Prudential Cleanroom Services' automatic ordering level quickens the reaction time to our customers' needs and ensures a complete and timely delivery.

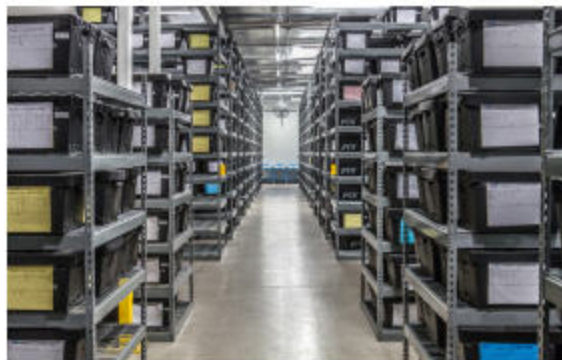

ADVACARE DISINFECTANT WASH FORMULA

Prudential wash formulas utilize AdvaCare disinfectant that meets EPA registration guidelines for requirements for disinfection. AdvaCare disinfectant utilized at a disinfection level of 4 oz per hundred pounds of laundry, the formulation meets the EPA requirements for laundry disinfection (complete kill) for ten different microorganisms:

- Staphylococcus aureus
- Klebsiella pneumoniae
- Pseudomonas aeruginosa
- Methicillin-resistant Staphylococcus aureus (MRSA)
- Methicillin-resistant Staphylococcus aureus (CA-MRSA)
- Acinetobacter baumannii
- Listeria monocytogenes
- Escherichia coli 0157:H7
- Salmonella enterica
- HIV-1 Virus

STERILIZATION VALIDATION PROGRAM

The validation activities contained in our validation manual and subsequent reports are based on ANSI/AAMI/ISO 11137:2015 (Sterilization of Health Care Products - Radiation - Part 1 Requirements for Development, Validation and Routine Control of a Sterilization Process for Medical Devices). Please note: these items are not health care products and the report does not imply that they should be considered as such. This validation of the sterilization process includes a qualification of materials, equipment, and processes, and the study of naturally-occurring bioburden on the product to be sterilized. The validation is performed to ensure that the products meet PCS sterility requirements. The selection of the dose to achieve 10^{-6} SAL was based on bioburden test results using an exhaustive recovery method, product weight and density. The sterility dose is confirmed quarterly by the performance of verification dose audits.

PRUDENTIAL'S STERILIZATION VALIDATION SAL 10^{-6}

Applies to reusable polyester cleanroom garments and ancillary items.

- Laundered and packaged at Prudential Cleanroom Services Plants
- Always in accordance with plant procedures
- Gamma irradiated using a Cobalt 60 Radio Nuclide source
- 10^{-6} SAL (Sterility Assurance Level)